

It's easy to change the icons, wallpapers and pictures in I-Kiosk 100. All you need to do is to replace the file in the firmware of display pack. However, get the followings ready before you customize.

- 1 Firmware of display pack, name as img.bz2
- 2 Installation of IZArc



Before changing wallpaper of I-Kiosk 100



A new design wallpaper to replace the existing wallpaper in iKiosk 100



After updated to the iKiosk 100 wallpaper is changed

### To install IZArc into your computer

The installation program of IZArc is bundled with the firmware of the display pack. Or you can download the program from <a href="http://www.izarc.org/download.html">http://www.izarc.org/download.html</a>

#### Step 1

Double click the IZArc\_Setup.exe to start the installation process.




img.bz2






Step 2 Click "Next" to proceed.

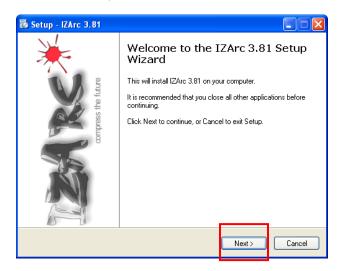


**Step 3**Choose to accept the license agreement and click "Next" button to proceed.

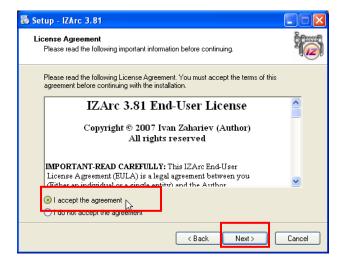



### Step 4

Define the installation pathway for IZArc by clicking the "Browse" button. It is recommended to install in the default location.

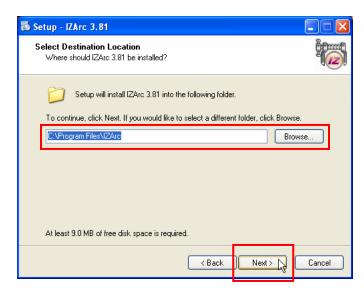


### Step 5

Click "Next" to continue.






# Step 6 Click "Next" to continue.

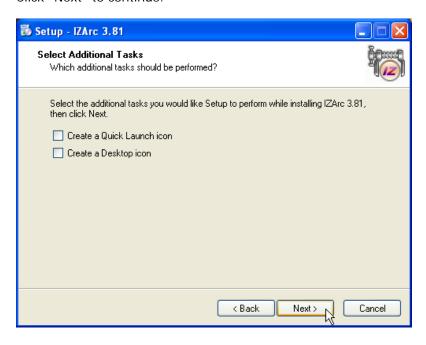


**Step 7** Click "Install" to start the installation process.

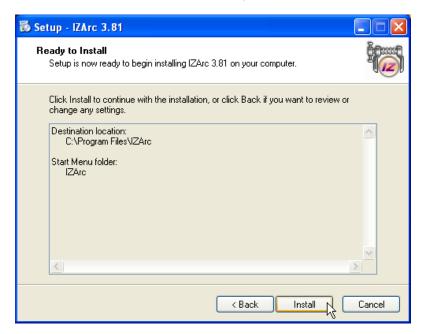



### Step 8

Wait until the installation process is complete.

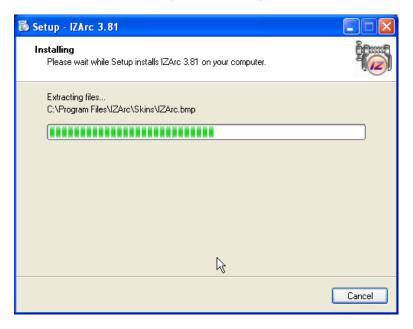


### Step 9

W System will request you to select your preferred language to operate the tool. It is recommended to use English as default.






Step 10 Click "Select All" to continue.

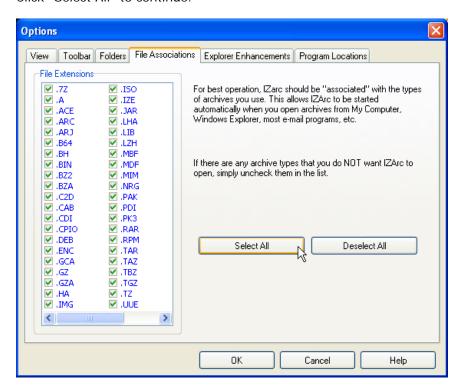

**Step 11** Click "Finish" to end the installation process.

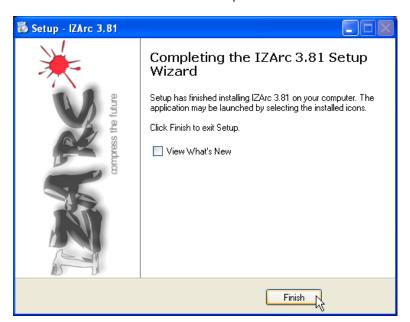



### To change display picture as wallpaper in i-Kiosk 100


You can change the pictures or icons in your i-Kiosk 100 to suit your needs.

### Step 1

Request the display pack from support@fingertec.com or from your local resellers. The display pack is in .bz2 format. Install the IZArc first before you can change the content in this file.



# **Step 2**By using the IZArc, extract the img.bz2 to view its content.

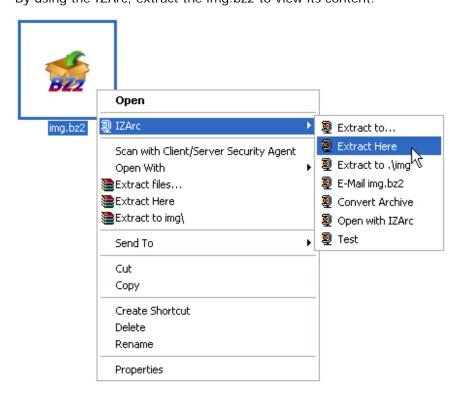




## Step 3

Now you have a folder named img. Click to view its content.



### Step 4

All images currently displayed in i-Kiosk 100 are saved in this folder. To change the display pictures or icons, paste the file into this folder to replace the existing file(s). For example, the wallpaper in i-Kiosk 100 is named as <desktop.jpg>.

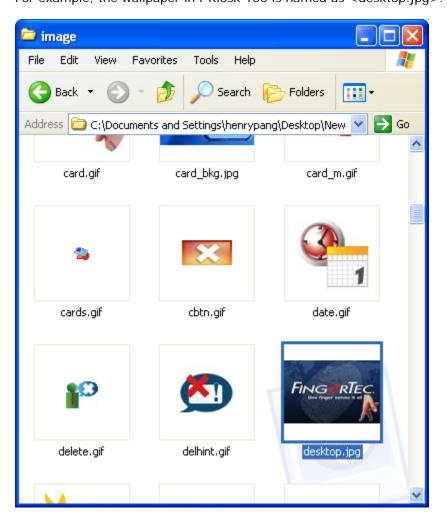



### Step 5

Prepare your preferred image(s) using the same dimension of the original image(s). The name of the new image must be the same as the file name in the img folder, for example <desktop.jpg>.




### Step 6

Paste the desktop.jpg into the folder img. This message will pop up. Click Yes for the system to overwrite the existing file.




The image of desktop.jpg will be changed to the latest image.

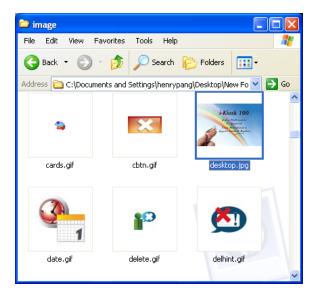



## Step 7


After replacing the desktop.jpg file with the new image, you must pack the folder img into img.bz2. By using IZArc, select "Add" to Archive file.

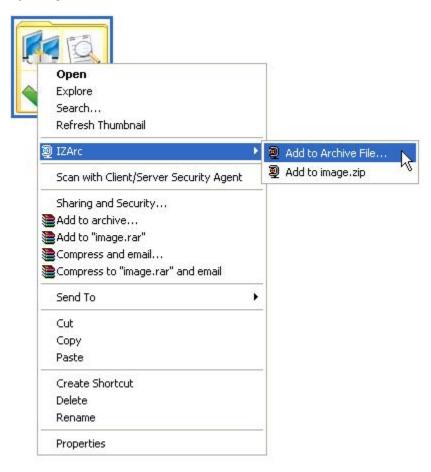



## Step 8

Select the archiving type as "BZIP2" and click "Add" to continue.

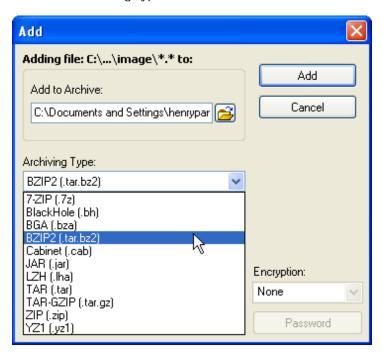


#### Step 9

A new file is created with the name <image.tar.tar.bz2>.





Step 10
Rename the file name to <img.bz2>

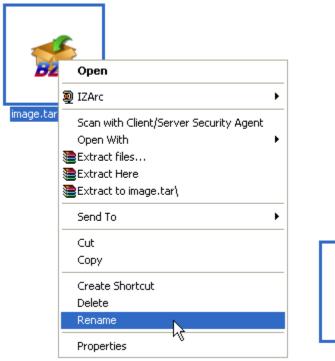



### Step 11

Save the <img.bz2> into a pen drive. Plug it into i-Kiosk 100, and press Menu > Pen Drive > Upload > Upload Theme.

After uploading, please restart the i-Kiosk 100 for the changes to take effect.