

CHANGING PICTURES IN I-KIOSK 100

Pictures in I-Kiosk display screen can be changed according to user's preference, be it your company logo, vision, or any pictures to project the image that you want.

To enable you to change pictures in i-kiosk 100, check the followings:

1. File Name – The file name must be the same as the assigned name in i-Kiosk 100. Please check the name of the picture you want to change and make sure you will rename your selected pictures using the exactly the same name as the file.
2. File Type – i-Kiosk 100 can only support only JPG file type.
3. File Dimension – To fit the screen properly, please check the existing dimension of picture in i-Kiosk 100 that you want to change.
4. File size – Please check the existing file size of picture in i-Kiosk 100 that you want to change.


Installing FingerTec® i-Kiosk Image Changer

Before you can do all the above operations, you must install **FingerTec® i-Kiosk 100 Image Changer**. Please follow the steps below:

Step 1 Double click to initiate the installation process.




Step 2

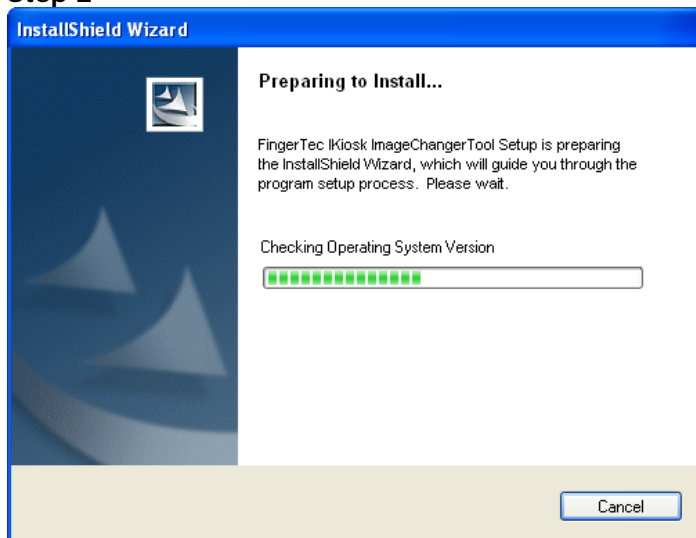

Installation shield is checking your operating system version. Please be patient.


CHANGING PICTURES IN I-KIOSK 100

Step 3

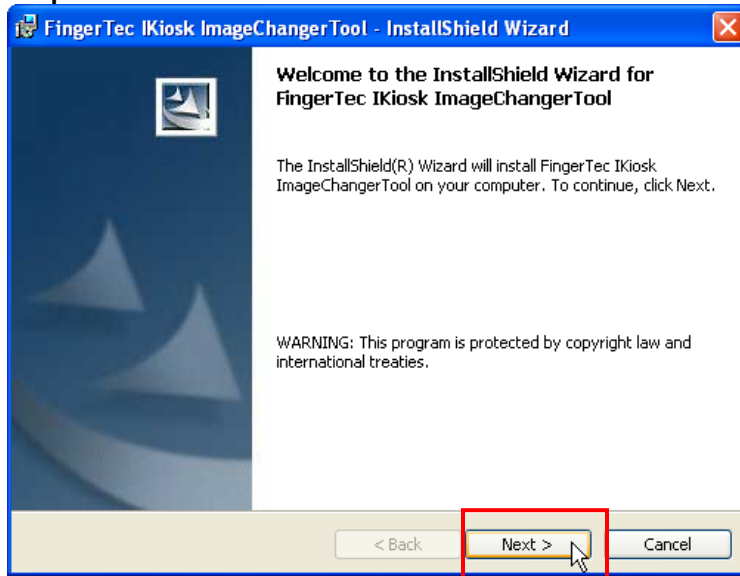

Follow the onscreen instruction. Click Next to proceed.


Step 4

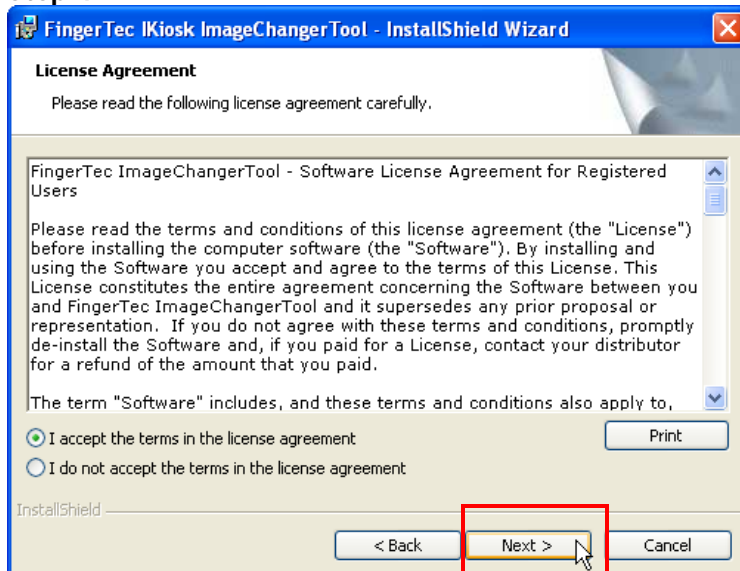

Read the license agreement carefully and make sure you understand the contents. Choose "I accept the terms in the license agreement" and click Next to proceed.


CHANGING PICTURES IN I-KIOSK 100

Step 5

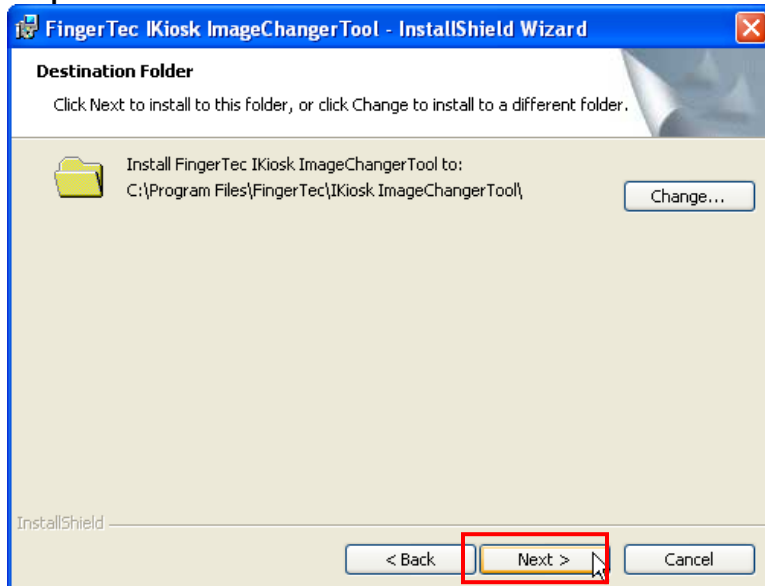

Installation shield suggest installing to “C:\ProgramFiles\FingerTec\Ikiiosk ImageChangerTool\”. You can change the installation path by clicking “Change”. If you wish to use the default installation path, click Next to proceed.


Step 6

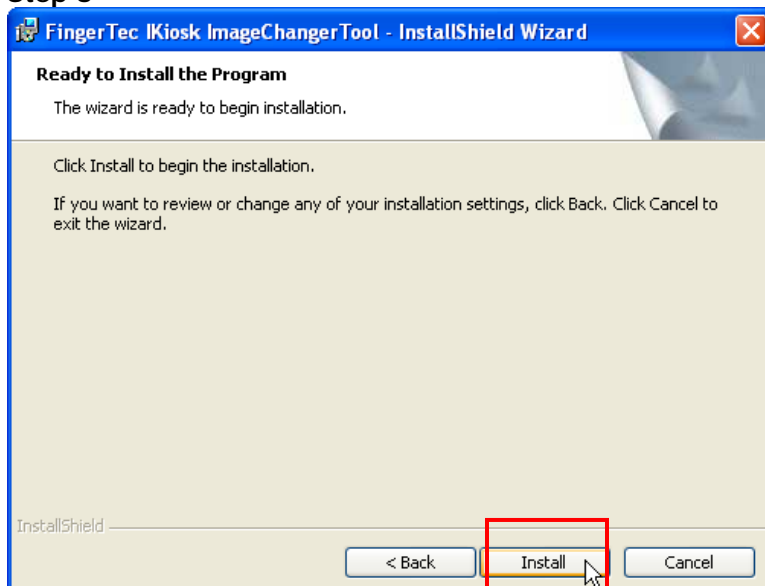

Click Install to start the installation process.


CHANGING PICTURES IN I-KIOSK 100

Step 7

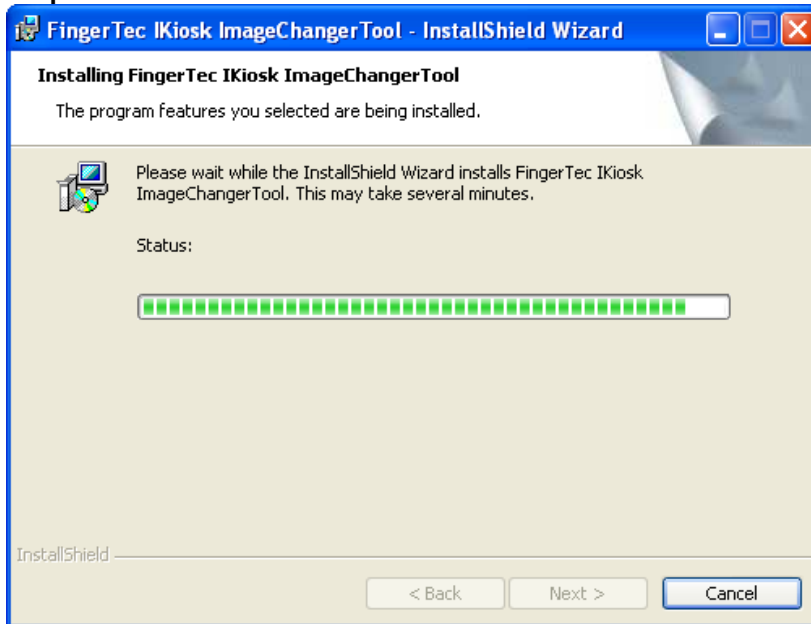

Please be patient during the installation process.

Step 8

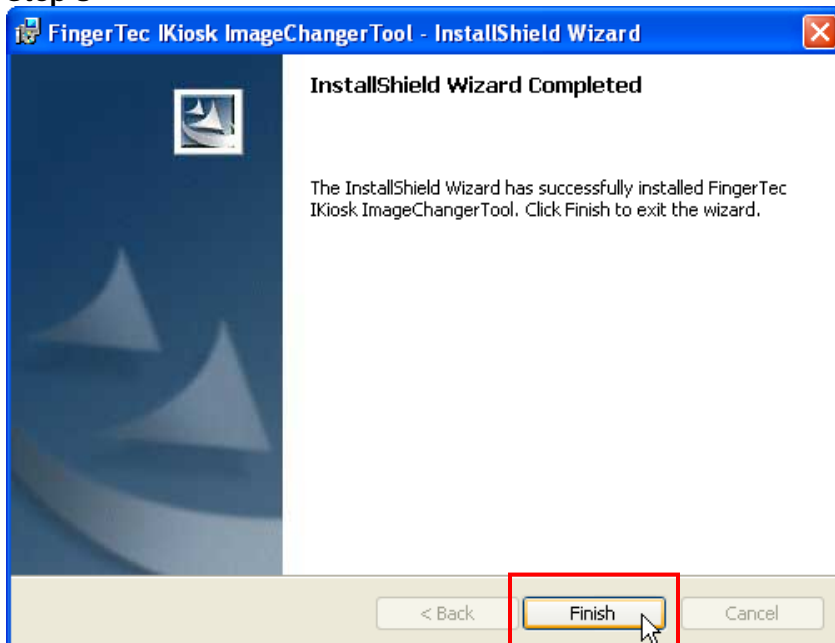

Click Finish to end the installation process.

CHANGING PICTURES IN I-KIOSK 100

Using the FingerTec® I-kiosk Image Changer

Step 1




A new icon is created after the installation. Double click to run it.

Step 2



A window pops up. Please select the model by clicking at the button.


If you choose "i-Kiosk 100", a new window pops up as below,

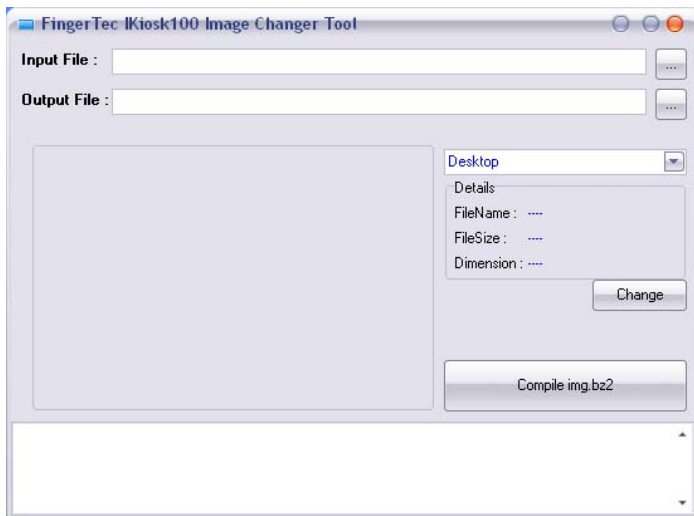

TIPS

CHANGING PICTURES IN I-KIOSK 100

If you choose "I-Kiosk 100 Plus", a bigger window pops up.

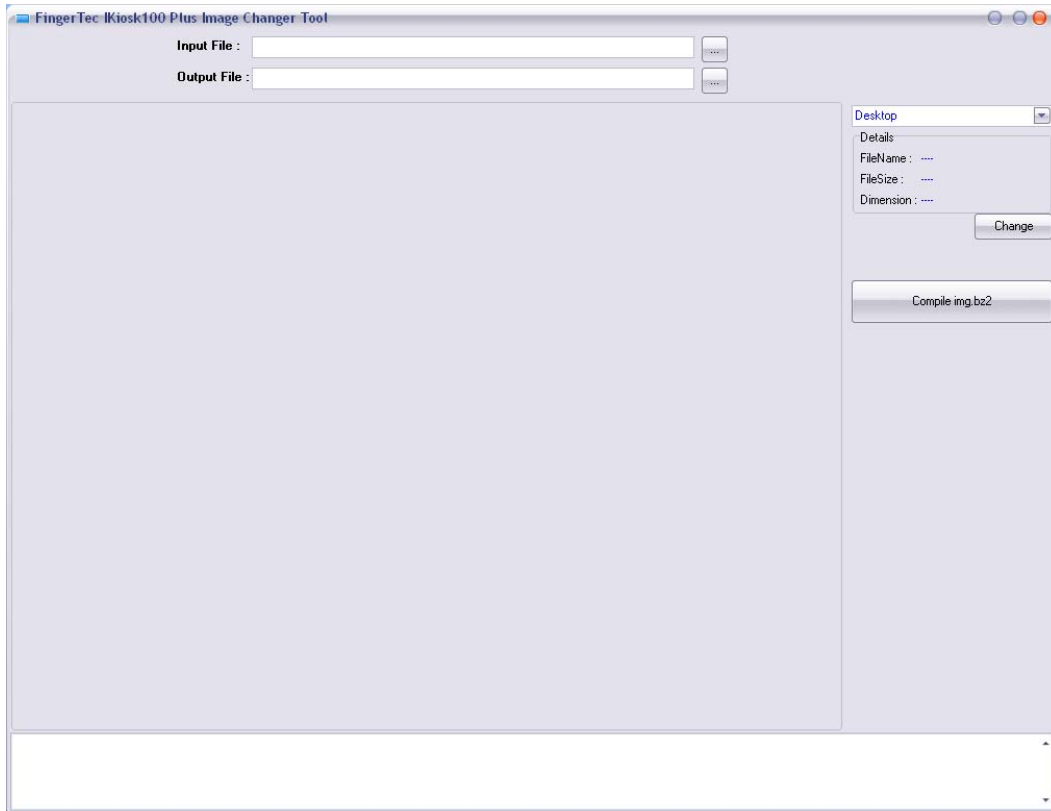


The difference window is due to the display area of I-Kiosk 100 and I-Kiosk 100 Plus. Please make sure you choose the correct model before you continue the process.

TIPS

CHANGING PICTURES IN I-KIOSK 100

Step 3

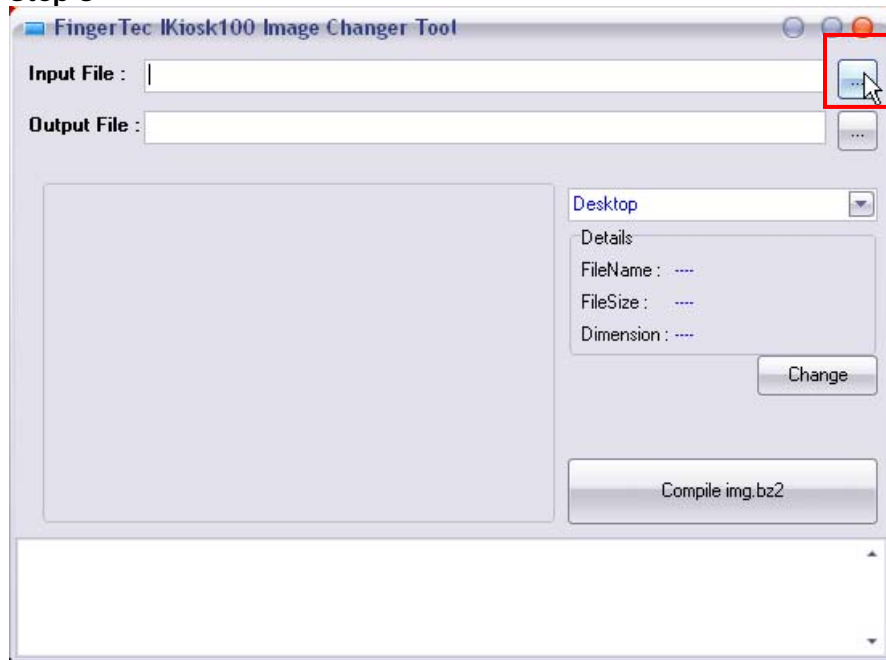


“Input file” is the original firmware of i-Kiosk 100, which contains the original FingerTec® pictures. This firmware is included during the installation. You must include the firmware into the tool, to change its contents.

Click the box and the system will lead you to find the firmware automatically.

CHANGING PICTURES IN I-KIOSK 100

Step 4

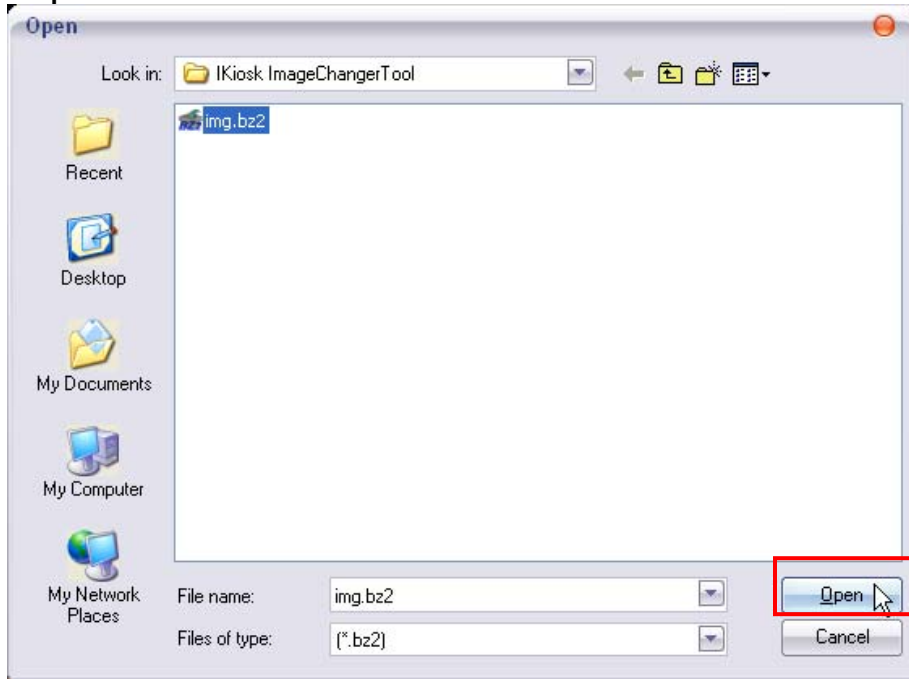

T The firmware must be named "img.bz2". i-Kiosk 100 only reads this file name as picture firmware. The upload process to i-Kiosk 100 cannot run if the file name is different. Select the file "img.bz2" and click Open to proceed.


TIPS

CHANGING PICTURES IN I-KIOSK 100

Step 5




All pictures in the firmware could be viewed after you have included them. Now you must define the "output file" to locate the new firmware after changing the files. Click the box to define the output file location.

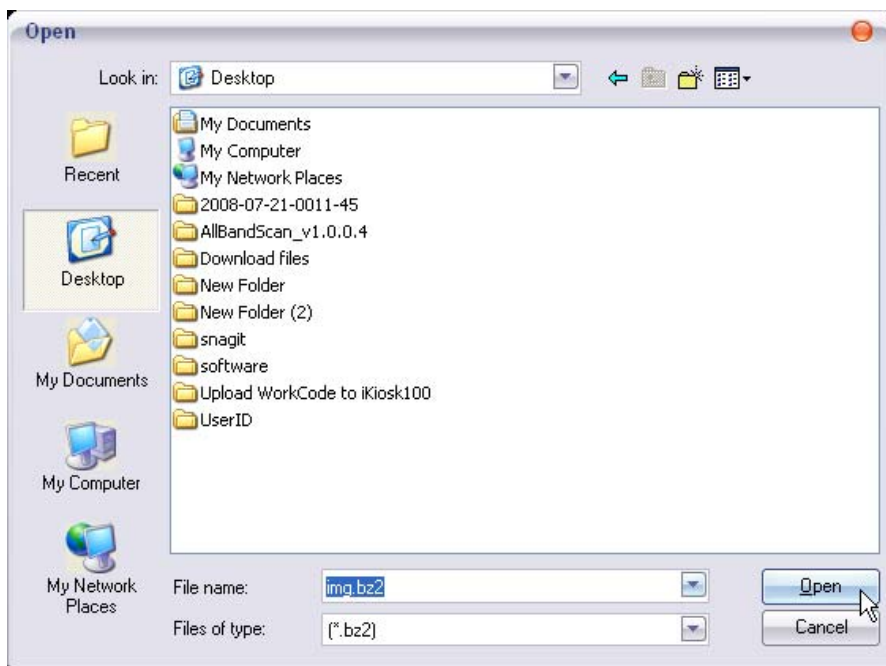

For example, for desktop, the output file name must be the same as the input file name, img.bz2.

TIPS


CHANGING PICTURES IN I-KIOSK 100

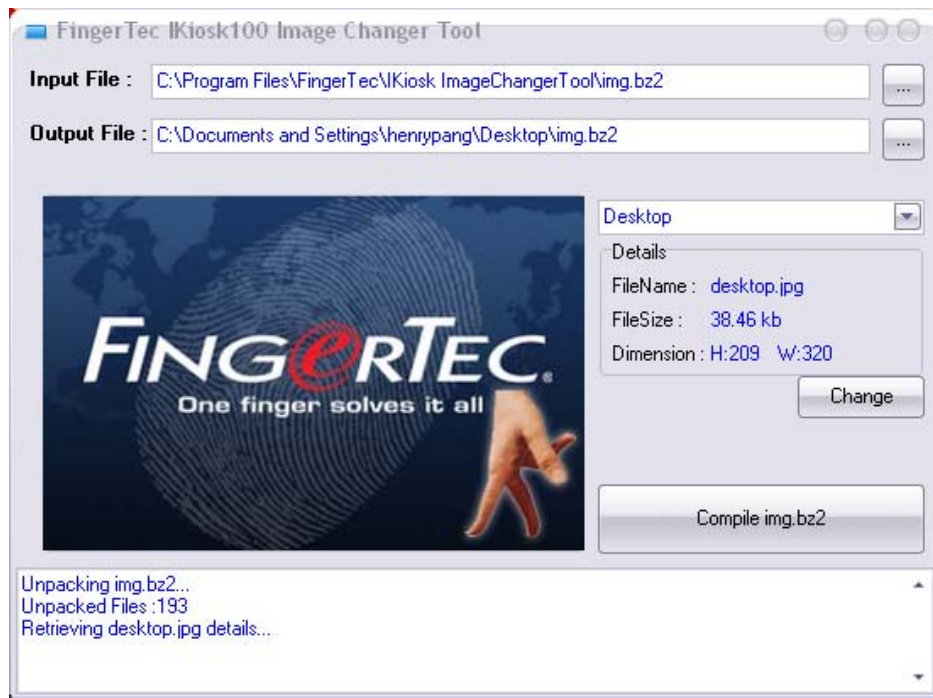

The output file location is fixed and you can change the display pictures.


CHANGING PICTURES IN I-KIOSK 100

Step 6

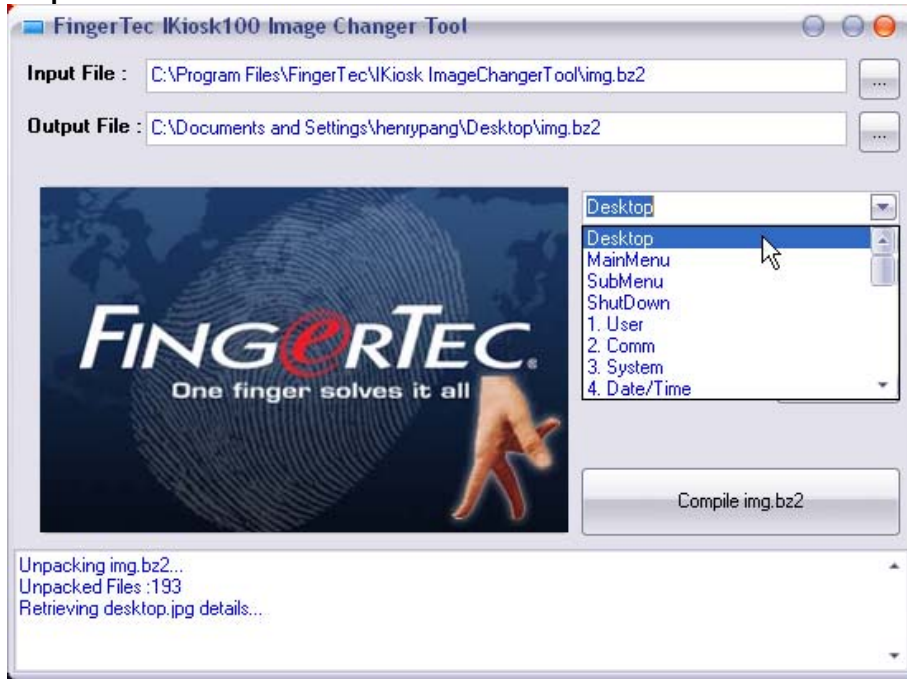

Select the picture, which you want to change, for example Desktop.jpg.

Step 7

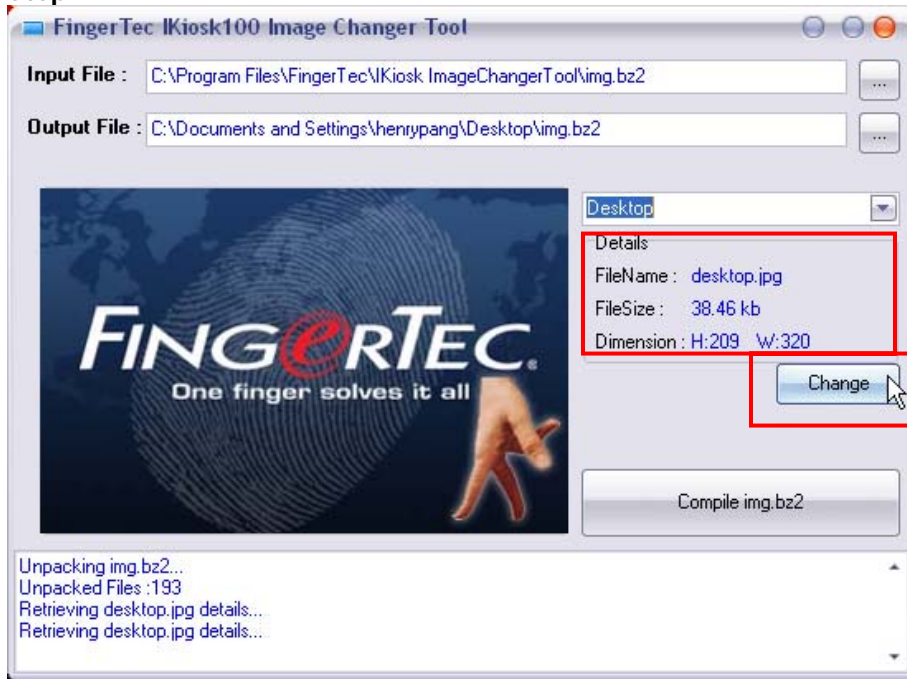


TIPS

CHANGING PICTURES IN I-KIOSK 100


Check the file name, file size, and dimension. The new picture, which is going to replace this existing picture, must be renamed as desktop.jpg, the current file size is 38.46kb, and its dimension must be less than 320(W) and 209(H).

If the file size and/or dimension are not compatible, the system will prompt error message.

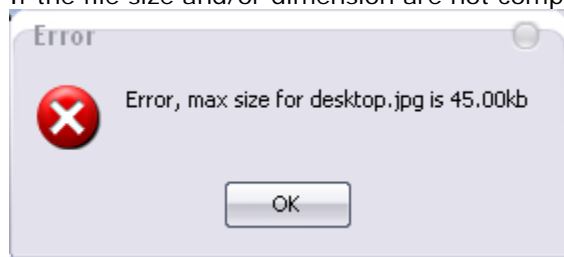

The maximum file size cannot exceed 45.00kb. Click Change to select the new picture to replace the existing ones.


Step 8

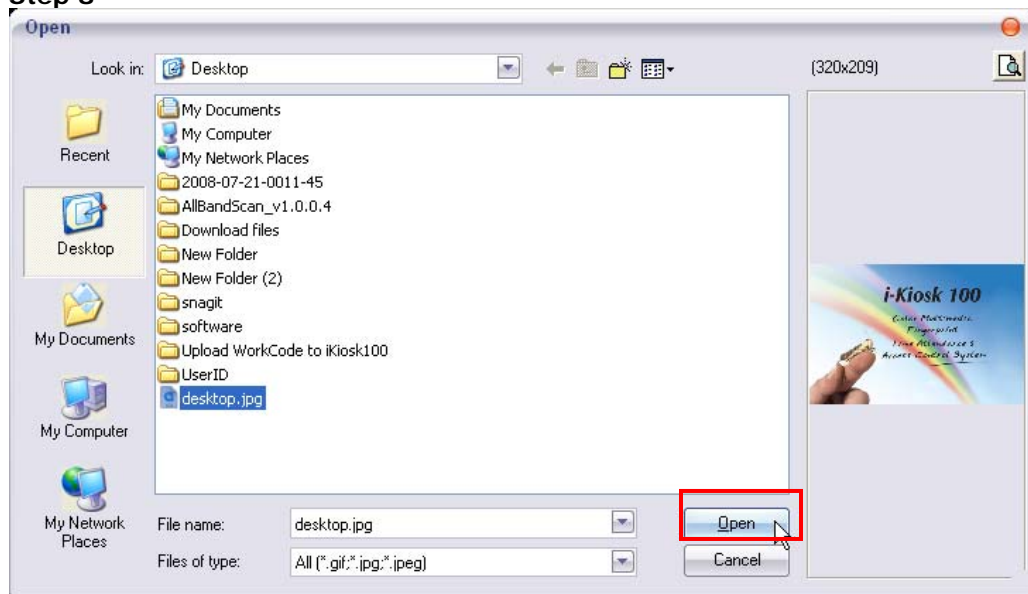

Click to select the file and click Open to proceed.

TIPS

CHANGING PICTURES IN I-KIOSK 100

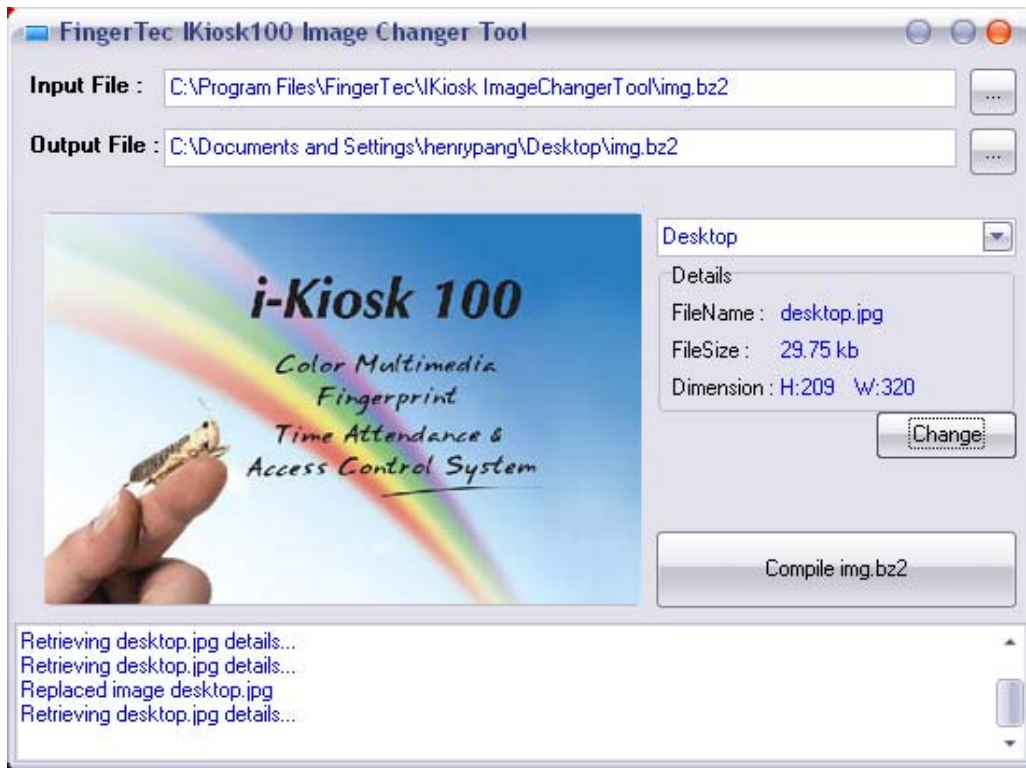

The system will preview the new file on screen.
You can repeat the steps to change other pictures, as you want to.

TIPS

CHANGING PICTURES IN I-KIOSK 100

Step 9



Click "Compile img.bz2" to prepare for the new firmware with the new picture displays.

Step 10



A new firmware will be created on desktop with a name "img.bz2". Please copy this into a USB pen drive and plug it to the I-Kiosk 100. In the I-Kiosk 100, press Menu > Pen Drive > Upload > Upload Pictures > OK. In the I-Kiosk 100 Plus, press Menu > Pen Drive > Upload Themes > OK. The operation will run by itself. Unplug the USB pen drive and restart your terminal after the update process.