

The top half of the page features a light blue background with a faint world map and a fingerprint pattern. The FingerTec logo is positioned in the upper left corner.

**FINGERTEC**

# **HARDWARE**

## **ADJUSTING THE VOICE**


SUGGESTIONS & SOLUTIONS FOR HARDWARE

### Step 1

Double click the VocSeg.exe icon

### Step 2

You will find the box as below

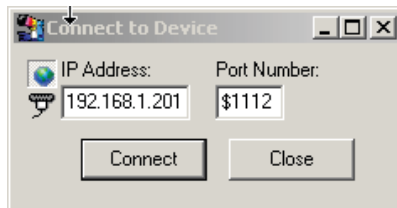


### Step 3

Select the communication type, insert the reader IP address and click the “Connect” button

### Step 4

Now you may adjust the voice here as below

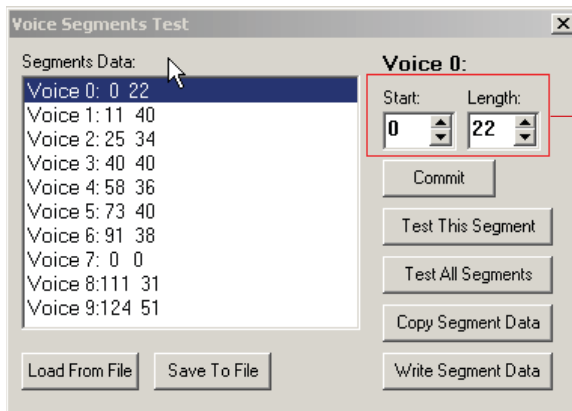

Adjust the voice here. Please click the commit button after making any changes. Test the voice segment after making any changes. Lastly, click Write Segment Data after you have satisfied with the entire voice segment.

### Step 5

Refer to the voice segment below when doing voice adjustment]

Voice 0	Thank you
Voice 1	Incorrect Password
Voice 2	Access Deny
Voice 3	Invalid ID
Voice 4	Please try again
Voice 5	Reenter ID
Voice 6	The clock is full
Voice 7	No voice
Voice 8	Duplicate fingers
Voice 9	Trans accepted, thank you

### Step 6

You will get the below message if the voice segment has been written to your device

